

Target TV Programing Guide for DM65d/e Series

11/11/2015

Part 1 – How to Control One T.V. at a Time

1.1 Press the “SET” button on the remote.



1.2 Numbers will show on all the TV's.



1.3 Press the corresponding number on the remote of the TV you need to control. Then press return. (“0”->”1” -> “Return”)

1.4 The number on the TV will highlight and you will be changing settings on JUST that TV.

1.5 Check/change settings as needed, see Page 2 below for setting guide.

1.6 Press the “UNSET” button to get back out to controlling the whole wall.




1.7 Repeat Steps 1-6 for all T.V.'s that need settings changed.

Part 2 – Samsung DM65d/e TV Settings

2.1 Set Source Input. Note: Set Source Input type first as settings are stored and set by source input type (DVI, DisplayPort, etc.)

- Set the input on TV's 1 & 5 to DVI.
- Set the input on TV's 2, 3, 4, 6, 7, 8 to Display Port.

Note: The following settings are accessed through the **Home** button on the remote.

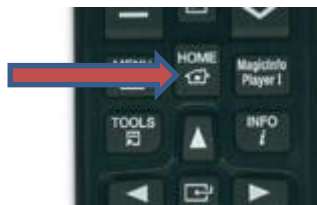

2.2 Picture Mode Settings


- Under **Home** -> Picture -> Picture Mode
- Set Picture Mode to "Calibration"

2.3 ID Settings

- Under **Home** -> ID Settings
- Set the Following Items:
 - Set Device ID to match the ID layout in Step 1.2. Note: Device ID is different than the video wall screen position number shown below.
 - Set PC Connection Cable to RS232C Cable

2.4 Video Wall Settings

- Under **Home** -> Video Wall
- Set the Following Items:
 - Apply to "Current Source"
 - Video Wall – On
 - Format - Natural
 - Horizontal – 2
 - Vertical – 2
 - Screen Position – Set Corresponding to Display Position

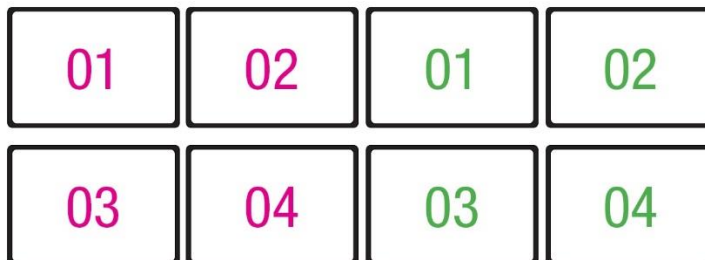

The following settings are accessed through the **Menu** button on the remote.



2.5 Auto Source Switching Settings

- Under **Menu** -> System -> Auto Source Switching
- Set the Following Items:
 - Auto Source Switching – OFF
 - Primary Source Recovery – OFF
 - Primary Source – ALL
 - Secondary Source –TV

2.6 Power Control Settings

- Under **Menu** -> System -> Power Control
- Set the Following Items:
 - Auto Power On – ON
 - Max. Power Saving – Off
 - Standby Control – Off
 - Power Button – Power On Only
 - Network Standby – OFF

2.7 Eco Solution Settings

- Under **Menu** -> System -> Eco Solution
- Set the Following Items:
 - Energy Saving – Off
 - Eco Sensor – Off
 - Screen Lamp Schedule – Off
 - No Signal Power Off – Off
 - Auto Power Off – Off

2.8 General Settings

- Under **Menu** -> System -> General
- Set the Following Items:
 - BD Wise – Off
 - Anynet+ (HDMI-CEC) Off
 - HDMI Hot Plug – On
 - Game Mode – Off